

## ELECTRIC VEHICLES MAINTENANCE SCHEDULE

Electric Vehicles Maintenance Intervals and Required Procedures				Maintenance Mileage (The interval between two services must not exceed 6 (six) months.)					
No	Part/System	General Maintenance Procedures	1.Month 500 KM (Break-in)	6.Month 3.000 KM	12.Month 6.000 KM	18.Month 9.000 KM	24.Month 12.000 KM	30.Month 15.000 KM	36.Month 18.000 KM
Inspection, Maintenance, and Adjustment Procedures									
1.a.	Front and Rear	Check that the handbrake cables are not jammed and operate properly; adjust if necessary.	●	●	●	●	●	●	●
1.b.	Front and Rear	Check the brake calipers and replace the brake pads if necessary.	●	●	●	●	●	●	●
1.c.	Front and Rear	Check the brake pedal and verify that there are no issues in the system (air, leaks, etc.).	●	●	●	●	●	●	●
1.d.	Front and Rear	Check the operation of the brake actuators.	●	●	●	●	●	●	●
1.e.	Front and Rear	Check the hydraulic fluid level and inspect for any leaks. (Add fluid if necessary, DOT4)	●	●	●	●	●	●	●
1.f.	Front and Rear	Check the front and rear brake discs.	●	●	●	●	●	●	●
1.g.	Front and Rear	Check the brake master cylinders.	●	●	●	●	●	●	●
2	Connection Elements	Ensure that all nuts and bolts are sufficiently tightened.	●	●	●	●	●	●	●
3	Lighting Elements	Check the operation of the headlight, rear stop light, turn signals, and switches.	●	●	●	●	●	●	●
4	Wipers	Check the wiper blades. Check the operation of the wiper hose and pump.	●	●	●	●	●	●	●
5	Battery	Check the tightness of the battery terminals. Measure the battery voltage; if necessary, fully charge or replace it.	●	●	●	●	●	●	●
6	Tyres	Check the tire air pressures, inspect tires for any damage, and measure tread depth.	●	●	●	●	●	●	●
7	Rims	Check for leaks or damage.	●	●	●	●	●	●	●
8	Wheel Bearings	Check that there is no play in the hub and that the wheels rotate freely.	●	●	●	●	●	●	●
9	Handlebar Bearings	Check if the handlebar bearings are worn or loose. Lubricate or replace them if necessary.	●	●	●	●	●	●	●
10	Front Suspension	Check the suspension movement. Inspect the shock absorber inner tube for scratches, damage, or excessive oil leakage.	●	●	●	●	●	●	●
11	Rear Suspension	Check that it does not produce any disturbing noise while operating and ensure there are no oil leaks.	●	●	●	●	●	●	●
12	Throttle Grip	Check the operation and throttle play; adjust if necessary.	●	●	●	●	●	●	●
13	Charger and Socket	Check the operation and connections.	●	●	●	●	●	●	●
14	Chain (If Equipped)	Check its operation and connections.	●	●	●	●	●	●	●

NOTE: The first maintenance of your vehicle must be performed at 500 km or at the 1st month, whichever comes first. The first maintenance is for control purposes. After this maintenance, your vehicle will be serviced at 3.000 km or at the 6th month (whichever comes first). After this maintenance, each maintenance will be performed in multiples of 3.000 km or in multiples of 6 months, whichever comes first. The interval between any two maintenance should not exceed 4 months. Consumers who do not reach the maintenance intervals in more than 6 months should take their product to the authorised service for maintenance. Vehicles that do not comply with maintenance intervals and kilometres will be out of warranty. -

- The warranty period for Volta Motor vehicles is 1 year. You can contact our authorized dealer/service center in your country for warranty terms.



**VOLTA MOTOR SAN.TİC.AŞ**  
**Merkez Mah. Yıldıztepe Cad. Gümüşova OSB Gümüşova / DÜZCE**  
**0380 731 25 25 - 0380 731 25 35 - info@volta.com.tr**